

How to program the Wireless Keypad with the Receiver on the Gate Motor

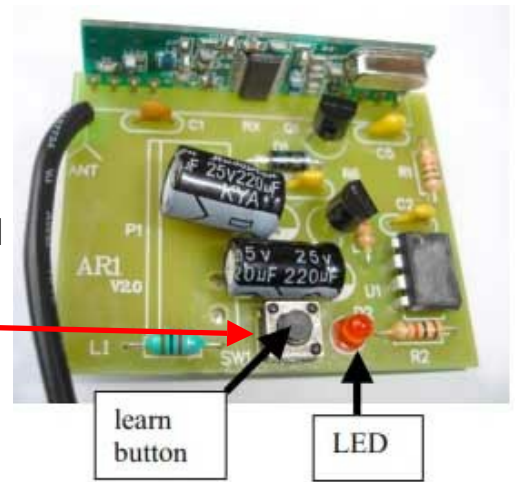
Step 1.
Press 11
On the Keypad



Step 2.
Then Press



Step 3.
Press the Learn button
On the receiver which
is located on the Control
Board of the gate motor
for 1 second
And the LED light will
Come on.



 
 


Step 4.

Then press  Finished



Changing the Password

1. Press 0 key on the keypad and hold it down together with the  key
2. Then release both keys.
3. Press the Factory preset password (11)
4. Press  key
5. Press in the Password (up to 8 numbers)
6. Press  key
7. Re-enter the New Password.
8. Press  key
9. That's it

How to Use the Keypad

1. Press in the New Password
2. Press  key

